SERIAL NUMBER

dynaco STEREO 150

This number must be mentioned in all communications concerning this equipment.

INSTRUCTIONS FOR **ASSEMBLY OPERATION**



929043

	CON	TENTS	
Specifications	2	Circuit Description	11
Introduction	3	Block Diagram	11
Installation	3	Schematic Diagram	12
Connections	3	Component Values	13
Operation	4	Combining Channels	19
Meter Option	5	240 Volt Wiring	20
Assembly Instructions	5	In Case of Difficulty	20
Mechanical Assembly	7	Voltages	22
Wiring the Heat Sink		Circuit Board Layouts	22
and PC-43	9	Service Policy and Limited Warranty	23
Wiring the Chassis	15	Kit Parts List	24
Final Assembly	16	Pictorial DiagramIr	sert

CAUTION: For continued protection, replace power fuse with the same type and rating as indicated.

WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS EQUIPMENT TO RAIN OR MOISTURE.

SPECIFICATIONS

Power output ratings:

Less than 0.25% total harmonic distortion at any power level up to 75 watts continuous average power per channel into 8 ohms (40 watts per channel into 16 ohms, or 150 watts monophonically into 8 ohms) at any frequency between 20 Hz and 20 kHz with both channels driven. Distortion reduces at lower levels.

Available power output:

(See above for F.T.C. Power Ratings) 20 Hz to 20 kHz, both channels driven:

75 watts continuous average per channel @ 8 ohms;

100 watts continuous average per channel @ 4 ohms;*

40 watts continuous average per channel @ 16 ohms.

Monophonically, 20 Hz to 20 kHz:

150 watts continuous average @ 8 ohms.

Intermodulation distortion:

Less than 0.25% at any power level up to 75 watts rms per channel into 8 ohms with any combination of test frequencies. Distortion reduces at lower power levels.

Power at clipping, single channel, 2500 Hz, less than 10/0 distortion:

90 watts @ 8 ohms;

130 watts @ 4 ohms;

45 watts @ 16 ohms.

Half-power bandwidth:

37.5 watts per channel at less than 0.25% total harmonic distortion from 5 Hz to 40 kHz into 8 ohms.

Frequency response:

 \pm 0, \pm 1 dB, 10 Hz \pm 40 kHz @ 1 watt into 8 ohms; \pm 0.5 dB, 20 Hz \pm 20 kHz @ 75 watts.

Hum and noise:

Greater than 95 dB below rated output, full spectrum.

Input:

35,000 ohm load; 1.0 volt for 75 watts @ 8 ohms.

Slewing rate:

7 volts per microsecond.

Damping factor:

Greater than 80 to 1 kHz into 8 ohms; Greater than 50 to 10 kHz into 8 ohms.

Channel separation:

Greater than 70 dB by IHF standards.

Connectors:

Inputs: phono jacks. Outputs: Color coded 3-way binding posts with standard 3/4" spacing.

Dimensions:

141/2" wide, 133/4" deep, 65/8" high.

Weight


Shipping weight 34 lbs; Net weight 29 lbs.


Power consumption:

60 v.a. quiescent; 5 amps maximum; 50/60 Hz, 120/240 vAC.

TYPICAL PERFORMANCE CURVES

To arrive at "typical" curves, four channels were evaluated on all bases. In each case, the curve shown is the next-to-theworst of the four. Therefore, do not expect exact correlation between curves.

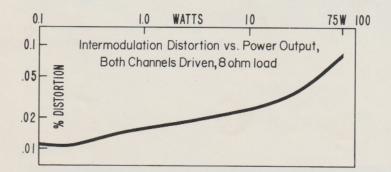

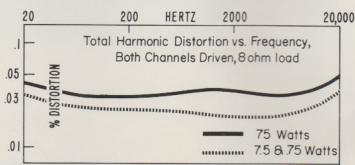

^{* 4} minute sustained full power limit without a fan.

INTRODUCTION

The Dynaco Stereo 150 is a basic two channel power amplifier employing all silicon semiconductors. They include 26 transistors, 25 diodes, and a thermal breaker. The output circuitry is of the full complementary symmetry design. The entire amplifier, except for an input network, is direct coupled. Its measured distortion levels approach the threshold of much laboratory test equipment, not only at the commonly specified full power ratings, but more importantly at very low power outputs as well. This is the result of circuit techniques which eliminate any discernible crossover notch at low levels, and contributes to the Stereo 150's freedom from listening fatigue. Its accurate, uncolored sonics have been achieved on a wide variety of loudspeaker loads, including electrostatics and multiple drivers with complex crossovers.

The design of a very fine power amplifier implies the necessity of several protection techniques for the amplifier, and for the speaker load. In addition to the AC line fuse, four separate B+ fuses are supplied. Electronic volt-amp limiting ensures safe operation of the output transistors, and a thermal breaker is mounted directly on the heat sink. An unusually large radiating area for the heat fins, which are coupled to an aluminum back panel, form a highly efficient heat sink. Speaker fuses protect the load.

The Stereo 150 has been designed as two independent 75 watts (at 8 ohms) amplifying channels with a common power supply having a high degree of inherent regulation. In addition, where higher powers or higher volt-amp capabilities are required for lower load impedances, internal restrapping permits monophonic operation for 150 watts output (at 8 ohms).

An accessory kit is available at additional cost for two output meters and meter switching, which includes alternative inserts for the front panel.

INSTALLATION

The Stereo 150 may be located in view or out of sight, since it will usually be controlled by a separate preamplifier, whose power switch will be used to turn the amplifier on and off. If the amplifier is to be mounted near a phonograph cartridge, check to make sure the cartridge does not pick up hum from the power transformer. Nothing should be placed on the perforated portion of the top of the amplifier. In addition to the finned heat sink, it is normal for the top to get rather warm when delivering high power output, particularly above the perforated metal.

VENTILATION is an important consideration. Although solid state units do not generate the high heat expected from tube designs, they can be limited by excessive heat buildup. All solid state amplifiers generate very nearly the same heat at 10% as they do at 100% power output, and maximum heat is generated at about 40% of full power. Thus, ADEQUATE AIR CIRCULATION IS ESSENTIAL. The Stereo 150 puts out the heat of a 40 watt lamp under

quiescent (no signal) conditions, and several hundred watts of heat at high power levels. The large, very efficient heat sink has more than enough cooling capacity for any music and speech signals—even at high powers—if fresh air flow under and around the unit is not restricted. Otherwise, fan cooling is suggested.

The Stereo 150 is intended to be installed horizontally, with its feet providing clearance for air flow under the unit. Do not allow the ventilation slots in the bottom to be restricted (don't place the amplifier on a rug, for example). The amplifier should not be mounted vertically, unless it is fan-cooled, and do not try to support the unit by the front plate.

If you wish to mount the amplifier through a cabinet panel, a cutout $6'' \times 13^5/8''$ is suggested. Remove the feet for front mounting access. A support flush with the bottom of the cutout should include an opening for the chassis vents.

CONNECTIONS

INPUT

Signal inputs are connected by shielded cables to conventional phono jacks on the back panel, under the heat sink. Channel A is designated the left channel; B the right. The amplifier's nominal input load impedance is 35,000 ohms. The input sensitivity is 1.0 volt for full output. The Stereo 150 may thus be easily driven by control preamplifiers such as the Dynaco PAT-5, PAT-4 or PAS-3X. The Dynaco PAS-3X tube type preamplifier requires an easy internal modification. To change, simply locate and remove the pair of 62,000 ohm (blue-redorange) resistors on the PC-5 printed circuit board in the preamp. Earlier PAS-2 and PAS-3 preamplifiers cannot be modified for use with the Stereo 150. Some other tube type preamplifier brands may require modification for optimum performance into a 35 K ohms load.

It is desirable to keep the left and right input cables close together throughout their run to avoid extraneous hum.

OUTPUT

Select speaker leads of sufficient size to preserve the high damping factor of your amplifier. Standard 18 gauge lamp cord ("zipcord") is suitable for distances up to 30 feet with an 8 ohm load. A larger wire size is advised for longer distances—#16 for 50 feet; #14 for 80 feet. #18 and #16 lamp cord is available from hardware and electrical supply stores, and is the easiest to use and conceal. For a 4 ohm load, these maximum distances should be cut in half, if you wish to maintain high speaker damping.

Connect the left speaker to Channel A output terminals. Be sure to maintain similar wiring "sense" for each speaker, so that they will be connected *in phase*. Normally the "—", common, or ground terminal of each speaker is connected to the black amplifier terminal. Proper phase sense is easily maintained with lamp cord because one conductor is coded with a molded ridge on the outer insulation.

Two speakers are connected in phase when maximum low frequency output is heard when they are driven from a monophonic source. Lowered output is observed when the connection to one of the speakers is reversed (out of phase, or reversed polarity). When using multiple speakers on each channel, or with 4-channel systems, it is important that all of the speakers in the same area be wired in phase.

The amplifier terminals are 3-way binding posts which will accept single or double "banana plugs," spade lugs, or simply stranded wire. If stranded lamp cord is used, the wire ends should be "tinned" with solder first to avoid fraying. To connect the wire, unscrew the terminal cap until the vertical hole through the metal shaft is uncovered from below, push the wire end through the hole, and tighten the cap.

Make certain that no wire strands can touch other than the intended terminal. Double banana plugs (from radio supply houses) are the most convenient connectors, and are simply inserted into the ends of the terminals. They are particularly useful if a second set of speakers is to be connected in parallel, as they plug into one another. The black "common" output terminals are electrically connected internally. They are also connected to the chassis, so the Stereo 150 may be used with special output connections which require common grounds. You must be certain that the polarity of such output connections is never reversed, however, so that the red "hot" terminals can never be connected together in other equipment.

AC POWER

The power cord should be plugged into a switched outlet on a control preamplifier, such as a Dynaco PAT-5, PAT-4 or PAS-3X. Once connected, the POWER switch on the Stereo 150 may remain on, and thereafter the POWER switch on the preamplifier will turn the Stereo 150 on and off.

If a preamplifier is not employed, the amplifier's line cord may be plugged into a conventional wall outlet, and the POWER switch on the Stereo 150 used to turn it on and off.

The POWER switch is the only control function on the Stereo 150. The indicator on the left front of the amplifier glows blue when the amplifier is on.

OPERATION

Almost silent turn-on and turn-off transients are a result of nearly equal charge (or drain) of the plus and minus supply voltages. However, harmless low frequency movement of the speaker may be observed as the voltages stabilize at turn-on, and decay at turn-off.

The Stereo 150 includes circuits to protect against the hazards of short circuit outputs, and abnormal load demands. Good operating practice will avoid the need to test their effectiveness, however, for there is no such thing as absolute protection from abuse.

The combination of moderately high power potential and the relative fragility of most high quality speakers makes it imperative that you take care to avoid such common faults as dropping a stylus (tone arm) onto a record; allowing the arm to skid across the record; or flicking the stylus with your finger while the volume is up on the preamplifier. These are typical errors which generate heavy low frequency pulses capable of severely overdriving the amplifier and consequently the speaker at subsonic frequencies.

LOUDSPEAKER RATINGS

Nominal speaker power ratings are a matter of concern. There is currently no U.S. standard. Manufacturers usually provide a "music power" rating, or indicate amplifier power limits. These should not be confused with continuous, or "rms" power acceptance for a sustained period which will be substantially lower. It is rare for a speaker to be able to handle as much power near the frequency extremes as in the midrange. Single woofer high fidelity speaker systems rarely have "music" ratings as high as 100 watts, or continuous duty wide band sine wave ratings as high as 40 watts.

In view of the power limitations of most high accuracy speaker systems, the connection of two or four similar speakers in the same location to a single channel is often advisable, if high signal levels are wanted. Lacking more definitive advice, a rough test is to place your hand in front of the woofer when playing a loud passage at your anticipated listening level. If you can feel any heat generated by the voice coil, you should consider the need for additional speakers to reproduce that level safely. When

high output, high accuracy reprodution is desired, a seriesparallel connection of four 8 ohm speakers (such as the Dynaco A-35) on each channel provides a resultant 8 ohm load with exceptional power handling capacity.

Speaker impedance varies with frequency—often by a factor of 4 or 5 to 1. Even the least variable speakers, like Dynaco's, have a 2:1 change. While most nominal ratings are close to the actual minimum impedance, when combinations approach the 4 ohm minimum recommended amplifier load, the safest procedure is to measure the resistance across the terminals with an ohmmeter. Speaker impedance usually varies upwards from this value. Use this figure to determine whether multiple speakers (on each channel) should be connected in parallel:

IN PARALLEL:	IN SERIES:	IN SERIES-PARALLEL:		
2× 8 ohms=4 ohms	2×4 ohms= 8 ohms	4×16 ohms=16 ohms		
2×16 ohms=8 ohms	2×8 ohms=16 ohms	4× 8 ohms= 8 ohms		
4×16 ohms=4 ohms	4×4 ohms=16 ohms	4× 4 ohms= 4 ohms		

These simple examples assume identical models. It is not wise to connect dissimilar speakers in series or in series-parallel because of adverse audio effects.

LOUDSPEAKER FUSING

The outputs of the Stereo 150 are provided with speaker fuses. The 3 ampere, 3AG fuses supplied will not fail when the amplifier is operated at full power (75 watts into 8 ohms), and therefore they provide NO PROTECTION for your speakers. Please understand that a fuse in series with the output of an amplifier is supplied primarily as protection for the speaker, although it does provide a measure of protection for the amplifier circuits. Nevertheless, the size of the fuse should be determined by the type of speaker you are using.

Since the power passed by a fuse varies with load impedance, and test signals have little correlation to music signals, and fuses vary in their tolerance of music overloads, the protective rating determination for a speaker is largely empirical. Logic would suggest the smallest value fuse which does not blow frequently at what are high, but

nonetheless safe levels for your speaker. There are few speakers capable of safely handling more power than will blow a 2 ampere fuse.

The speaker manufacturer who specifies a fuse rating solves your problem. Lacking this, remember that a fuse will not blow until a sustained signal well above its rating is imposed for a time. A slo-blo fuse will allow appreciably more overdrive than the same value standard fast-blow type, and is thus not generally recommended for speaker protection.

The chart below shows the highest sustained power level which will not blow the fuses shown. Remember that speaker impedance typically rises well above its nominal value. Experience suggests that on this basis power levels of 10 watts are safe starting points for most high fidelity speakers using a single woofer.

3AG FUSE TYPE	4 онмѕ	8 онмѕ	16 онмѕ
½ ampere	1 watt	2 watts	4 watts
3/4 ampere	2.2 watts	4.5 watts	9 watts
1 ampere*	4 watts	8 watts	16 watts
1½ ampere**	9 watts	18 watts	36 watts

* Dynaco A-10, A-25 and A-35 speakers ** Dynaco A-25XL, A-40XL, and A-50 speakers

THE MC-2 ACCESSORY METER OPTION KIT

The optional meter kit is most easily installed at step 16 of the Final Assembly instructions, before continuing to step 17.

The action of the meters supplied is "fast" enough to respond to substantial musical peaks, but no meter can accurately indicate the magnitude of transient waveforms which occur in music. They are effective in determining electrical balance of stereo programming, but the very nature of stereo implies discrete information on each channel, so exact level matching rarely occurs. With sine wave test signals and an accurate 8 ohm load, the meter is a measure of output power. A square wave test signal puts out approximately 11% more voltage than the equivalent sine wave meter indication.

To protect the meters from "pegging" (overdrive), it is recommended that the 0 dB position of the meter range push button switches be used where the anticipated power levels are not known, and when starting any test. Switching to successively higher sensitivity ranges until the loudest passages indicate near "0" will yield the most information.

The accompanying chart lists 8 ohm load power outputs in watts for each meter range. For a 4 ohm load, the wattage should be doubled. For a 16 ohm load, the wattage should be halved. When the amplifier is wired for mono use, only the Channel B meter will read, and the power indicated remains the same as the chart below.

	METER RANGE					
SCALE	0 dB	—6 dв	−12 dB	—18 dB		
+ 3	150	37.5	9.4	2.4		
0	75	18.75	4.7	1.2		
- 3	37.5	9.4	2.35	0.6		
-10	7.5	1.87	0.47	0.12		

ASSEMBLY INSTRUCTIONS

GENERAL ASSEMBLY INFORMATION

Construction of the Stereo 150 is very simple when compared to other kits. The PC-43 printed circuit board has been preassembled and tested to save you much of the work, and the assembly that remains is in an open, uncluttered layout to make wiring quick and easy. The construction time will be several hours. It is better to work slowly and carefully rather than concern yourself about the time.

When you unpack the kit, check off the components against the parts list on page 24. Separate the hardware items in an egg carton or similar container. You can identify unfamiliar parts by checking them against the Pictorial Diagram, bearing in mind that the drawing is necessarily somewhat distorted for visual separation.

Have the proper tools at hand before starting construction. The tools necessary are:

- 1. A pencil-type soldering iron with a 3/16" tip or smaller of 40 to 60 watts rating, with a tip temperature of 700 to 800° F.
- 2. A damp sponge or cloth to wipe the tip of the iron.
- 3. 60/40 rosin core solder not larger than 1/16" diameter.
- 4. A medium sized screwdriver (1/4" blade).
- 5. A #2 Phillips screwdriver (medium sized, crosspointed tip).
- 6. Long nosed and diagonal cutting pliers.

- 7. Heavy "slip joint" pliers.
- 8. A single edged razor blade or inexpensive wire stripping tool for removing insulation.
- 9. Wood toothpicks.
- 10. Transparent or masking tape.

We do not recommend using a soldering gun. Not only can a gun provide more heat than is necessary—an unskilled user might damage printed circuit boards-but also many users tend to make poor solder connections, simply because they do not wait long enough for the gun to reach its operating temperature each time. Use a conventional pencil type iron.

A good solder connection does not require a large amount of solder around the joint. A well-made connection looks smooth and shiny because the solder flows into the joint when both parts are hot enough.

There are four steps to making a good solder connection:

- 1. Make a good mechanical connection.
- 2. Heat both parts with the tip of the iron at the junction.
- 3. Apply solder to the junction until it melts and flows.
- 4. Allow the connection to cool undisturbed.


ALL SOLDERING MUST BE DONE WITH A GOOD GRADE OF ROSIN CORE SOLDER.

Under no circumstances should acid core solder be used. Unmarked solder, cheap solder or any of doubtful origin should be discarded, and separate solder fluxes should never be used. The warranty is voided on any equipment in which acid core solder or acid type fluxes have been used. Silver solder is not suitable. The recommended solder is 60/40 (60% tin, 40% lead) ROSIN CORE. Do not confuse this with 40/60, which is harder to use.

You should realize that many of the more delicate components are less likely to be damaged in the soldering process if you use a hot iron for a short time, rather than a cooler iron for a longer period. You will also make a better connection with the hot iron. If you keep the iron clean by wiping the tip frequently, and occasionally add a small amount of solder to the tip, it will aid the transfer of heat to the connection. Do not allow too much solder to build up on the tip though, or it may fall onto adjacent circuitry.

One of the best ways to make a good mechanical connection is to bend a small hook in the end of the wire, and then to crimp the hook onto the terminal lug. The amount of bare wire exposed need not be exactly ½-inch, but if it is too long, the excess might touch another terminal lug or the chassis. Do not wrap the wire around the lug more than one time, as this makes the connection difficult to remove if an error is made.

Many of the wiring steps will call for "preparing" a wire of a certain length and color. This involves cutting the necessary length of wire and stripping $\frac{1}{4}$ inch of insulation from each end. This is most easily done with wirestrippers, but diagonal cutters can be used if you are careful not to nick the wire and weaken it.

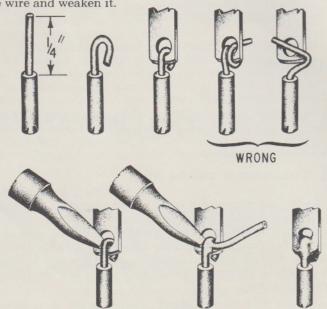

When soldering a lead to a numbered, plated-through hole on a circuit board, push the lead through the hole first. Do not push the wire all the way into the hole up to the insulation. Apply the solder and the hot iron at the same time to the junction of the hole and lead. The solder should melt very quickly; it should flow easily and fully into the hole and completely around the lead. Remove the iron and allow the connection to cool. If in doubt of your connection, you may also wish to apply solder and iron to the hole and lead from

the other side of the board. It is *essential* to have a smooth, shiny flow of solder from the lead to the plated circuitry on the board.

WIRING THE KIT

The position of all wire leads should follow the diagram closely, bearing in mind that the pictorial diagram has necessarily been distorted somewhat to show all connections clearly. See that uninsulated wires do not touch each other unless, of course, they are connected to the same point. It is especially important that uninsulated wires or component leads or terminals do not touch the chassis accidentally.

Whenever one wire is to be soldered to a connection such as a lug terminal or hole, the instructions will indicate this by the symbol (S). If more than one wire is to be soldered to the same point, the instructions will cite the number of wires that should be connected to that point when it is to be soldered. If no soldering instruction is specifically given, do not solder; other connections will be made to that point before soldering is called for.

Check your work after each step, and make sure the entire step has been completed. When you are satisfied that it has been correctly done, check the space provided and go on to the next step. Be sure you read carefully the explanatory paragraphs in the assembly instructions.

The PC-43 printed circuit board, which includes most of the electronic components for the Stereo 150, has been in-circuit tested before being packed into the kit. These tests include every significant performance criterion—gain, power, distortion, frequency response, functioning of protective circuitry—as well as provide precise adjustment of necessary circuit parameters to assure that your amplifier will meet or exceed the specifications when these instructions are adhered to, and all connections have been properly completed.

Where stranded wire is used, as on the transformer leads, be very careful not to cut through the strands when stripping the end. Where stranded wire is supplied for hookup wire in the kit, the strands will be bonded together to minimize this likelihood and make handling easier.

All mounting screws are installed from the *outside* of the chassis, and a nut with lockwasher attached, called a KEP nut, is used except when otherwise specified.

This kit uses a variety of hardware. Before starting assembly, separate all the hardware by using an egg carton, muffin pan, or small cups. #4, #6, #8 and #10 machine screws with oval (binder) heads are used in various lengths, but much of the hardware used is #6 binder head in a ½" length. There are also #6 flat head screws, which are used only when called for on the front panel. To simplify construction, nuts with lockwashers attached, called KEP nuts, are supplied. Two types of sheet metal screws are used—one kind in black with a cross-slotted (Phillips) head, and the second kind in bright metal with a coarse thread and a slightly tapered, blunt end.


The center "C" (collector) lugs of the sockets for the output transistors have a notch rather than a hole for mechanical connection. Crimp the wire in a tight "U" in the notch to hold it securely for soldering. In such cases, it may be helpful to strip *slightly* more than the standard ½" of insulation from the wire. Note that the mechanical crimping of the wire serves *only* to hold the wire stationary while the solder is applied. The integrity of every solder connection is essential.

Transistor equipment will not tolerate wiring errors, sloppy or incomplete soldering. TAKE THE TIME TO BE NEAT AND ACCURATE, and your amplifier will operate properly at first, and for many years.

MECHANICAL ASSEMBLY

Select the painted back panel. Note that the outside surface is printed with white lettering. Some of the parts will be mounted from the outside, and others from the inside.

- 1() Select the dual input socket strip, the matching insulator strip, two small flat black washers, and two #4 (smallest) screws and KEP nuts. This input strip mounts *inside* the center bottom of the back panel. Insert the screws from the outside, install the insulator first on the inside, then a flat washer on each screw, followed by the input strip, and fasten with the KEP nuts. The input strip mounts in either direction. Make sure that the metal of the socket strip does not touch any surface of the back panel, and firmly tighten the hardware.
- 2() Select the two round speaker fuse holders, and install them from the outside. Their hardware is attached. The rubber washer stays outside the panel, and the flat side of the mounting hole engages a similar flat on the holder for proper positioning. Secure each holder with its lockwasher and nut.
- 3()Install the two red binding posts in the holes just above each fuse holder. Their hardware is attached. See the sketch below. The shoulder piece goes on the outside of the back panel with the smaller diameter portion protruding through the hole. The insulating plastic ring fits over it inside the back panel, followed by the washer. Before tightening the first nut, unscrew the outside knurled end and observe the hole in the metal shaft. For greater convenience in connecting leads to these posts later, rotate the assembly so that this hole is in a vertical position. Slip a short piece of wire through the hole for easy observation as you firmly tighten the first nut. Slide on the connecting lug, and fasten with the second nut. Position each connecting lug as shown in the Pictorial Diagram, and keep the hole vertical as you firmly tighten the second nut.

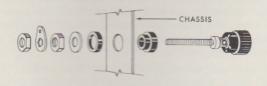

- 4() In a similar manner, install the two black binding posts in the holes adjacent to the red posts. Keep the hole in the metal shaft vertical, and note the correct lug placement in the Pictorial Diagram.
- 5() Select the round thermal breaker with an attached screw, and a #6 (next to the smallest size) KEP nut. The breaker mounts in a hole at the top of the panel directly above the input sockets. Insert the screw from the inside, position the solder lugs parallel to the top of the back panel, and fasten securely with a nut on the outside. Note that this is the only nut fastened from the outside.

Much of the hardware used to mount the parts in this kit is #6-32 x $\frac{1}{2}$ ". If no mention is made of the type of hardware, use this size. A set is one screw and one KEP nut.

- 6(X) Select one of the black heat fins, a 6-lug terminal strip, and six sets of #6 hardware. We recommend that you now install masking or transparent tape around the outer edges of the black heat fins to protect their finish and your work surface. The back panel has two groupings of holes, and the central portion of the heat fin has matching holes. Place the flat of the heat fin against the outside of the back panel so that all the holes match. If a "T" is stamped in the heat fin, this indicates the top. Insert the screws from the outside in the six smaller holes. Then mount the terminal strip on the inside, positioned as shown in the Pictorial Diagram. Fasten with a KEP nut on all six screws, and tighten only the two center screws very tightly. The other four screws should remain finger tight until later.
- 7(X) Select the remaining black heat fin, the other 6-lug terminal strip, and six sets of #6 hardware. In a similar manner tape the outer edges of the heat fin, and mount it to the back panel. Match the remaining group of holes in the back panel with those of the heat fin, mount the 6-lug terminal strip on the inside, and firmly tighten only the two center screws.

Set this assembly aside, and place the front panel in front of you. Note that the edges of the inside surface are turned up. The few parts mounted on this panel will be mounted on the inside.

- 8() Select the power switch, two #6 screws with *flat heads*, and two lockwashers. Note that each lockwasher is deliberately supplied one size larger than the screw, to provide greater thickness. Insert the screws from the outside in the countersunk holes provided, place the lockwashers over the screws on the inside, and install the power switch so that its solder lugs are nearest the *center* of the panel. Nuts are not required, as the switch has tapped mountings.
- 9() Select the two lamp sockets, two #6 screws with flat heads, two lockwashers, and two #6 kep nuts. Insert the screws from the outside in the two countersunk holes above the small cutout on the other end of the panel, place the lockwashers over the screws on the inside, install each socket, and fasten with a nut on each screw. Position the sockets at an angle, as shown in the Pictorial Diagram (so that the lamps, when installed, will appear in the center of the rectangular opening), and tighten the screws firmly. [If the MC-2 meter kit has been obtained, skip this step. The lamp sockets are not used.]

This completes the mechanical assembly of the front panel. Set this assembly aside, and place the main chassis bottom plate in front of you, flanges down.

10()Select the four rubber feet, and the four 3/8" #8 screws (the largest hardware). Insert a screw through each foot, and then mount a foot at each corner of the chassis on the *outside* (flanges down). No other hardware is required; the chassis is supplied with threaded nuts for these screws.

Turn the chassis over, flanges up, with the rows of ventilation holes at the back toward you.

- Select the power (single clip) fuse block, and a #4 screw and nut (the smallest hardware). Insert the screw from the outside, and install the fuse block in the smallest hole at the left front of the chassis. See that the block is parallel to the adjacent flange and to the left of the two nearby chassis "dimples". Tighten the hardware.
- 12()Select the 1" square diode block, a ¾" #6 screw, and a #6 kep nut. Note that the terminals of the block are identified "+", "-" and (two) "AC". The block will be mounted near the right front of the chassis. The "+" terminal (which may be identified by a red dot or a very small locating lug on the flat surface) lies over a tiny hole in the chassis. Make certain this diode block is correctly positioned. Install the block over the screw through the chassis, and secure it with a nut. Recheck the location of the "+" terminal and tighten the hardware securely.
- 13()Select the two 2-lug terminal strips, and two sets #6 hardware. Install one strip in the hole adjacent to the fuse block, and install the other strip in the hole next to the diode block. Position the strips as shown in the Pictorial Diagram, and tighten the hardware.
- 14()Select one of the large 10,000 µf capacitors, one of the large circular capacitor mounting brackets, and four sets of #6 hardware. Do not remove the clear plastic outer insulation from either of these capacitors. This bracket will be installed to the left front of the rows of ventilation holes in the chassis. Note in the Pictorial Diagram the correct position of the clamp, and also the direction of the clamping screw. One set of #6 hardware is first installed in the clamp before mounting. Insert the capacitor in the bracket, position the "+" on top of the capacitor to the front as shown, and temporarily tighten the clamp. Now mount the bracketed capacitor with the remaining hardware. Securely tighten the hardware.
- 15()Select the remaining large capacitor, the remaining bracket, two solder lugs, and four more sets of #6 hardware. Slide the capacitor into the bracket as before, position the "+" toward the back, and tighten the clamp. Mount the bracketed capacitor to the right front of the rows of ventilation holes in the chassis. The solder lugs are mounted over the back screw, between the bracket and the nut. Position the solder lugs as shown, and secure the capacitor bracket and the solder lugs to the chassis. See that the screw for the solder lugs is very tight.
- 16()Select the four 3/8" #10 sems screws (with lockwashers attached), and the remaining four solder lugs. Install the solder lugs on capacitor terminals C1 lugs #1 and #2, and on C2 lugs #3 and #4. Position the lugs as shown in the Pictorial Diagram, and secure each with a screw. See that the screws are very tight.
- 17()Select the B+ (four clip) fuse block, and the remaining two sets of #4 hardware. If the chassis has a slot between the large capacitors, install the fuse block over the slot and use the ends of the slot and the

- outer holes in the fuse block for the hardware. If the chassis has four small holes between the capacitors, install the fuse block over the holes and use the outer holes in the fuse block for the hardware. Insert the screws from the outside, and tighten the hardware.
- 18()Select the power transformer, the four ½" #10 (largest hardware) screws, the four large flat washers, and the four #10 kep nuts. Mount the transformer on the center front of the chassis with the black, blackwhite, violet and violet-yellow leads toward the left front, and the orange, red, and red-yellow leads toward the right back. Place a large washer on top of each transformer foot before the nut is installed, and firmly tighten the hardware.
- 19()Select the front panel assembly, and four 3/8" #6 black Phillips head sheet metal screws. Place the front panel in position inside the flanges of the chassis, after seeing that the transformer leads are clear of the panel at the bottom. Insert a screw in the corner hole of the flange at each end, and the remaining two in the chassis at the bottom. The screws cut their own threads and therefore some force is required. Use a #2 Phillips screwdriver to tighten the hardware.

Set the chassis aside and return now to the back panel.

The next two steps describe the mounting of the output transistors on the back panel heat fins. A thin uniform film of silicon thermal compound is needed on the mating surfaces to provide maximum heat transfer from a transistor to the heat sink. Excess compound will be messy, and is a disadvantage, since the compound is intended only to fill in minute voids between flat surfaces.


This thermal compound can be most annoying if carelessly handled. Clean up any excess with paper tissues as you go along. It is difficult to remove from clothing, and the best removal agent, if needed, is Freon—a degreasing agent available in a pressure spray can at electronic supply houses.

One of the easiest ways to handle this compound is to apply it with the blade of a screwdriver or a toothpick. However, the screwdriver used should be other than the one employed to install the hardware.

The four output transistors plug into sockets on the heat fins. Note that the holes for the transistor pins in the sockets are off-center. The longer end is identified with an "E" stamped in the fiber adjacent to a lug, and the shorter end is stamped with a "B" also adjacent to a lug. The center "C" lug is unmarked.

The metal insulators (shaped like the transistors) are hard-anodized for excellent thermal conductivity with electrical isolation. Do not scratch them. Apply the thermal compound in a *very thin film* to both surfaces while holding it by the tab at the "B" end. Position the insulator correctly, and install it on the transistor. Then the combination is installed on the outside of the heat fin and plugged into a socket on the inside. The longer "E" end of each socket is positioned to the right, as viewed in the Pictorial Diagram.

The simplest procedure seems to be the following: after placing the compound coated insulator on the transistor, wipe each transistor pin clean of all compound. Then position the combination to properly match the mounting holes, and press it against the heat fin on the outside with a *slight* twisting motion to assure uniform contact. While holding it in place, snap the socket over the pins from the inside. When firmly engaged, this will hold each assembly temporarily so that the screws can be installed from the outside in one final operation to minimize smearing.

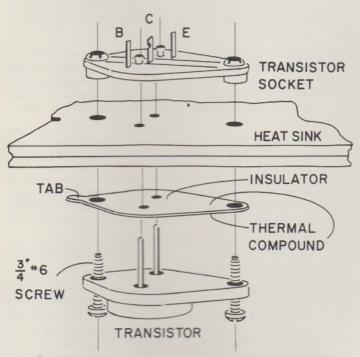

20(A)Select the two transistors, Part #561357 (2N6029 or 2N6030), two metal insulating wafers, two transistor sockets, the thermal compound, and four of the 3/4" #6 sheet metal screws (coarse threads with slightly tapered ends). Do not confuse these transistors with the two #571105 transistors, which look the same, but will be mounted in the next step. First check to see that the transistor pins are straight. These two transistors will be mounted from the outside at the BOTTOM of the two heat fins in positions Q2A and Q2B. Apply a thin film of compound to both sides of the insulator, position it correctly, and install it over the transistor pins. Wipe the pins clean, and plug each assembly through the heat fin into the transistor socket. Secure each with two sheet metal screws.

21(Select the two transistors, Part #571105 (2N5629 or 2N5630), the other two insulating wafers, the two remaining sockets, and the last four 3/4" sheet metal screws. Check for straight transistor pins. Apply a thin film of compound to the insulating wafers as before, wipe the pins clean, install these from the outside at the top of the heat fins in positions Q1A and Q1B, and snap them into the sockets. Secure with the sheet metal screws.

This completes the need for the compound. Wipe off all the excess, including the threads of the transistor mounting screws, to avoid smears as you complete construction. 22(Select the two perforated black transistor covers. Their installation requires removal of the two sets of #6 hardware used to attach the tops of the heat fins to the back panel, and loosening the two sets of hardware used to attach the bottoms of the heat fins. Slip one end of a cover—they are made symmetrically—under the hardware at the bottom, and reinstall the hardware at the top. Tighten all eight screws very firmly.

WIRING THE HEAT SINK AND PC-43

Be particularly careful handling the preassembled audio circuit board, for it represents a substantial portion of the cost of the Stereo 150. Many of the components stand upright on the board, and careless handling can unduly flex and possibly break their leads. There are also four adjustable potentiometers on the circuit board whose values (positions) have been precisely set under operational test conditions for optimum performance. Be very careful that none of these is disturbed when handling the board.

- 1() Select the PC-43 audio circuit board, the two Z-shaped metal mounting brackets, and four sets of #6 hardware. Install the brackets on the *foil side* (not the components side) of the board, with the long side against the board, and the first bend at the row of holes at the bottom. Insert the screws first through the board from the components side, then through the bracket, with each nut against the bracket. Firmly tighten the hardware.
- 2()Place the back panel assembly in front of you, so that it lies on its heat fins, and positioned so that the top is toward you. Place PC-43, foil side up, against the bottom of the back panel, so that holes #12 and #15 on the board are adjacent to input socket lugs #4 and #1, respectively. Support the board about 2½" off the work surface on a box, such as a tissue box, so that the row of holes on PC-43 is adjacent to the bottom flange of the back panel.

In succeeding steps connections will be made to plated through holes on PC-43. A good connection is more certain if the tip of the wire is first "tinned" by heating it and applying a *very small amount* of solder before it is connected to the hole. Insert the wire in the hole so that bare wire is visible on *both* sides of the board. Let the soldering iron contact the junction of wire and board circuitry as you feed solder to the junction. Solder should flow smoothly from the circuitry, *around the hole* to completely surround the wire. Keep the wire steady while the connection cools, and then wiggle it to make sure the connection is secure. If in doubt, reheat the connection and add more solder.

Do *not* add solder to the holes before a wire is inserted. If you do, it will be difficult to find the hole to clear it. However, should you solder a wire in error to a wrong hole, first remove the wire by using the iron, and while the solder is still hot, push a toothpick through the hole to clear it.

The following connections will be made to the foil side of the board.

3() Prepare a 2¾" (7 cm) black wire, but remove ¾" (1 cm) of insulation from one end and the conventional ¼" (.6 cm) of insulation from the other. Pass the longer prepared end through input socket lug #3 to lug #2, and solder both lugs. Connect the short-prepared end to hole #13 on the board (S).

- 4(\(\)) Prepare a 4\(\)/4\('\) (11 cm) yellow wire, by removing the conventional \(\)^4\('\) (.6 cm) of insulation from both ends. Connect one end to hole \(\pi4\) (S). Connect the other end to speaker fuse holder lug \(\pi3\) (S).
- 5(\times) Prepare another $4\frac{1}{4}$ " (11 cm) yellow wire. Connect one end to hole #23 (S). Connect the other end to speaker fuse holder lug #2 (S).


These wires will have stabilized the position of PC-43 relative to the back panel assembly.

- 6(/)Prepare a $2\frac{1}{4}$ " (5.5 cm) blue wire. Connect one end to hole #12 (S). Connect the other end to input socket lug #4 (S).
- 7())Prepare a $2\frac{1}{4}$ " (5.5 cm) yellow wire. Connect one end to hole #15 (S). Connect the other end to input socket lug #1 (S).
- 8()) Prepare a 1½" (4 cm) blue wire. Connect one end to speaker fuse holder lug #4. Connect the other end to red binding post lug #4.
- 9())Select a .27 ohm, 5 watt resistor, and cut its leads to 5/8" (1.6 cm) each. Do not confuse it with the .33 ohm resistors, which look the same. Connect one lead to speaker fuse holder lug #4 (S-2). Connect the other lead to red binding post lug #4 (S-2). Position the resistor body against the red binding post.

Each lug of the 6-lug terminal strips T-1 and T-2 has two holes, the conventional one at the tip, and the other at the base through the insulating material. For ease of connection, several of the steps following will indicate soldering to the *tip* or to the *base* of a lug on these terminal strips. The two holes will be soldered independently.

- 10()Prepare a $3\frac{1}{2}$ " (9 cm) blue wire. Connect one end to hole #5 (S). Connect the other end to T-2 lug #12 at the *base*.
- 11()Select a .33 ohm, 5 watt resistor, cut its leads to $\frac{5}{8}$ " (1.6 cm) each, and bend the leads 90° to its body. Do not confuse it with the .27 ohm resistors. Connect one lead from the right to T-2 lug #12 at the base (S-2). Do not place the resistor against T-2, but mount it about $\frac{1}{8}$ " (.3 cm) to the right of the terminal strip. Connect the other lead to T-2 lug #10 at the base (S).
- 12(Select another .33 ohm, 5 watt resistor, cut its leads to $1\frac{1}{4}$ " (3.2 cm), and bend the leads almost 90° to its body. Connect one lead from the right to T-2 lug #12 at the tip (S). Position the resistor body to the right of the other .33 ohm resistor, leaving a small space between them. Connect the other lead to T-2 lug #9 at the base (S).
- 13()) Prepare a 4" (10 cm) yellow wire. Connect one end to hole #8 (S). Connect the other end to T-2 lug #10 at the tip.
- 14()Prepare a 11/4" (3 cm) yellow wire. Connect one end to T-2 lug #10 at the tip (S-2). Connect the other end to Q2B lug E.

All diodes supplied have their cathode end marked with a stripe, an arrow head, or a colored tip. It is this *marked* cathode end that will be referred to in several subsequent steps. The accompanying sketch shows the diodes more than double size.

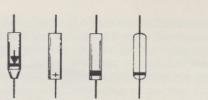

DIODE

- 15()Select one of the diodes, part #544012 (or 1N4003). Cut the lead on the *marked* end to ½" (1.3 cm), cut the other lead to ¾" (2 cm), and bend the leads 90° to its body. Connect the lead on the *marked* end to Q2B lug E (S-2). Connect the other lead to Q2B lug C. Notice that lug C has a notch in it rather than a hole. Hook the lead in the notch until soldering is called for.
- 16() Prepare a 4" (10 cm) blue wire. Connect one end to hole #10 (S). You may wish to temporarily insert a toothpick in hole #11 to prevent it from filling with solder as hole #10 is soldered. Bend a small hook around the other end, and connect it to Q2B lug C (S-2).
- 17()Prepare a $3\frac{3}{4}$ " (9.5 cm) black wire. Connect one end to hole #7 (S). Connect the other end to Q2B lug B (S).
- 18(\times) Prepare a $4\frac{1}{2}$ " (11.5 cm) yellow wire. Connect one end to hole #6 (S). Connect the other end to T-2 lug #9 at the tip.
- 19 (Prepare a $2\frac{1}{4}$ " (6 cm) yellow wire. Connect one end to T-2 lug #9 at the tip (S-2). Connect the other end to Q1B lug E.
- 20(X)Select another of the diodes, part #544012 (or 1N4003). Cut the lead on the *marked* end to $^3/_4$ " (2 cm), cut the other lead to $^1/_2$ " (1.3 cm), and bend the leads 90° to its body. Connect the *lead without marking* to Q1B lug E (S-2). Connect the marked end lead to the notch in Q1B lug C. Note that the marked end of this diode and the one connected to Q2B point in opposite directions.
- 21()Prepare a 5½" (14 cm) blue wire. Connect one end to hole #3 (S). Temporarily insert a toothpick in hole #2, if desired. Bend a small hook around the other end, and connect it to Q1B lug C (S-2).
- 22()Prepare a $5\frac{3}{4}$ " (14.5 cm) black wire. Connect one end to hole #9 (S). Connect the other end to Q1B lug B (S).
- 23() Prepare a 1½" (4 cm) yellow wire. Connect one end to speaker fuse holder lug #1. Connect the other end to red binding post lug #1.
- 24()Select the last .27 ohm, 5 watt resistors, and cut the leads to \(^5\gramsup''\) (1.6 cm) each. Connect one lead to speaker fuse holder lug \(^41\) (S-2). Connect the other lead to red binding post lug \(^41\) (S-2). Position the resistor body against the red binding post.
- 25()) Prepare a $4\frac{1}{2}$ " (11.5 cm) blue wire. Connect one end to hole #22 (S). Connect the other end to T-1 lug #6 at the base.
- 26(_)Select a .33 ohm, 5 watt resistor, cut its leads to $\frac{5}{8}$ " (1.6 cm) each, and bend the leads 90° to its body. Connect one lead from the left to T-1 lug #6 at the base (S-2). Mount the resistor about $\frac{1}{8}$ " (.3 cm) to the left of the terminal strip. Connect the other lead to T-1 lug #4 at the base (S).

CIRCUIT DESCRIPTION

The components in the Stereo 150 have been selected to protect against failure, and all parts are operated conservatively to assure unaltered performance and proper operation for many years. The semiconductors have been thoroughly researched and selected for minimum noise and distortion in sustained use, and the printed circuit board associated with audio signals has been pretested in the circuit to insure that this unit will meet or exceed all specifications.

The amplifier stages are fully DC coupled, with a differential pair for the input, and a fully complementary output stage. Its power supply is a full wave bridge with 10,000 mfd capacitors on both the plus "+" and minus "-" supplies to provide excellent filtering and dynamic load stability. Protection circuitry includes two separate power supply fuses for each channel, volt-amp limiting, a thermal breaker to shut down the amplifier in case of high temperature, output fuses to protect the amplifier and speakers, and an AC line fuse.

DIFFERENTIAL AMPLIFIER

Transistors Q101 and Q102, the input differential pair, are driven from a constant current source, transistor Q103, to optimize parameters for the input pair. Potentiometer P101 adjusts the reference voltage for the base of Q101, which in turn balances transistors Q101 and Q102 to control the DC offset of the amplifier.

BIAS ADJUSTMENT

An adjustable electronic equivalent of a zener diode with negligible dynamic resistance is formed by transistors Q106 and Q107, resistors R111, R112 and R113, and poten-


tiometer P102. Thus the signal sees the bases of transistors Q110 and Q111 tied together. Potentiometer P102 adjusts the zener voltage to bias the amplifier for Class AB operation, and therefore determines the quiescent (idle) current in the driver and output stages. Complete circuit stability is assured by mounting transistor Q106 to thermally track the driver and output transistors, and to provide temperature compensation for the amplifier.

DRIVER AND OUTPUT STAGES


The driver and output stages of the Stereo 150 are of the full complementary configuration. Transistors Q110 and Q201 form a Darlington pair for the positive half of the signal, and transistors Q111 and Q202 form another Darlington pair for the negative half of the signal.

PROTECTION

A volt-amp limiter circuit protects both the positive and negative halves of the driver and output stages. When the current through resistor R201 exceeds a preset limit, its resulting voltage drop turns on transistor Q108, and limits the drive to transistor Q110 until the current is reduced for the positive half of the circuit. The same operation takes place to protect the negative amplifier circuit through resistor R202 and transistor Q109, and limits the drive to transistor Q111. Diodes D201 and D202 across the output devices limit possible reverse voltage from inductive loads to 700 millivolts maximum. If the heat sink temperature of a pair of channels rises to 75° C, a thermal breaker will shut down the power supply until the heat sink cools down.

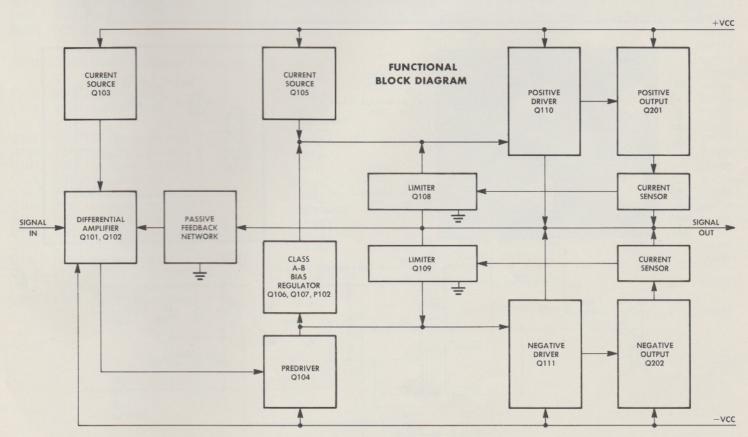

SCHEMATIC DIAGRAM

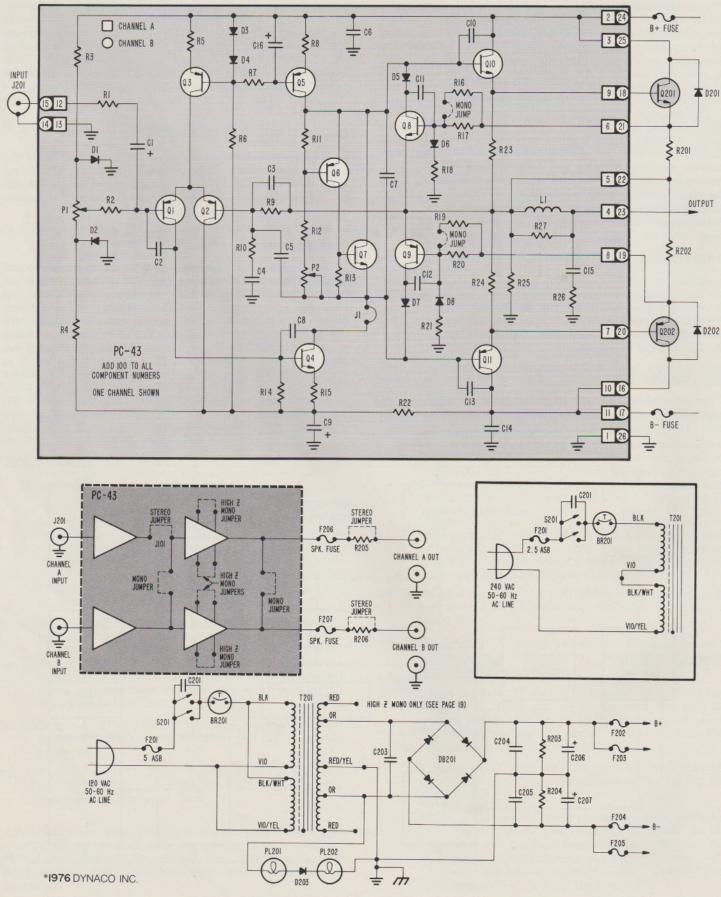

COMPONENT VALUES


All resistors are 1/4 w., 5% unless otherwise indicated.

All I	resistors are $\frac{1}{4}$ w., 5% unless otherwise in	dicated.			
		PART #			DADT #
R101	1,000 ohms	119102	D101	Silicon diode, 1N4148	PART#
R102	47,000 ohms	119473	D102		543148
R103	33,000 ohms		D102	, , , , , , , , , , , , , , , , , , , ,	543148
R104		119333		,	543148
R105		119333	D104		543148
R106	100,000 ohms	119221	D105	Silicon diode, 1N4148	543148
R107	1,000 ohms	119104	D106	Silicon diode, 1N4148	543148
R108	100 ohms	119102	D107	Silicon diode, 1N4148	543148
R109	24,000 ohms	119101	D108	Silicon diode, 1N4148	543148
R110		119243	D201	Silicon diode, 1 a., 200 PRV	544012
R111	1,000 ohms	119102	D202	Silicon diode, 1 a., 200 PRV	544012
R112	1,000 ohms	119102	D203	Silicon diode, 1 a., 200 PRV	544012
	2,200 ohms	119222	DB201	Silicon bridge rectifier, 25 a., 200 PRV	544504
R113	1,000 ohms	119102			
R114	560 ohms	119561	BR201	Thermal Breaker, 15 a., 75° C	342011
R115	4.7 ohms	119047			
R116	560 ohms	119561	F201	Fuse, 5 ampere, slo-blo, 3AG	342050
R117	560 ohms	119561	F201	Fuse, 2.5 ampere, slo-blo, 3AG(240 v. alt.)	342026
R118	7,500 ohms	119752	F202	Fuse, 4 ampere, 3AG	342004
R119	560 ohms	119561	F203	Fuse, 4 ampere, 3AG	342004
R120	560 ohms	119561	F204	Fuse, 4 ampere, 3AG	342004
R121	7,500 ohms	119752	F205	Fuse, 4 ampere, 3AG	342004
R122	100 ohms	119101	F206	Fuse, 3 ampere, 3AG	342003
R123	47 ohms	119470	F207	Fuse, 3 ampere, 3AG	
R124	47 ohms	119470		,	342003
R125	1,200 ohms, 2 w., 10%	118122	C101	$4.7 \mu f$, $15 v$. tantalum	282505
R126	10 ohms, 2 w., 10%	110100	C102	150 pf, 500 v., 10% disc	
R127	Included with L101	110100	C103	56 pf, 500 v., 10% disc	238151
R201	0.33 ohms, 5 w., 5%	120033	C104	50 μf, 25 v. electrolytic	234560
R202	0.33 ohms, 5 w., 5%	120033	C105	10 pf, 500 v., 10% disc	282500
R203	10,000 ohms, 1 w., 10%	115103	C106	$0.1 \mu\text{f}, 100 \text{v.}, 20\% \text{disc}$	234100
R204	10,000 ohms, 1 w., 10%		C107	$0.1 \mu\text{f}, 100 \text{v.}, 20\% \text{disc}$	224104
R205	0.27 ohms, 5 w., 5%	115103	C108	82 pf, 500 v., 10% disc	224104
R206	0.27 ohms, 5 w., 5%	120027	C109	$50 \mu f$, $75 v$. electrolytic	224820
20200	0.27 diffilis, 6 w., 6 / 0	120027	C110	150 pf, 500 v., 10% disc	284500
****			C111		238151
L101	Audio choke wound on 1 ohm, 5 w., 5%	453002	C112	0.01 μf, 100 v., 20% disc	234103
			C112	0.01 μf, 100 v., 20% disc	234103
P101	5,000 ohms trimpot	190502	C114	150 pf, 500 v., 10% disc	238151
	1,000 ohms trimpot			0.1 μf, 100 v., 20% disc	224104
	-,	190103	C115	0.1 μf, 100 v., 20% disc	224104
0101	DAID		C116	50 μf, 6 v. electrolytic	281476
Q101	PNP transistor, 2N4889	562889	C201	$0.02 \mu f$, 500 v., $20\% disc$	227203
Q102	PNP transistor, 2N4889	562889	C202	$0.02 \mu f$, 500 v., 20% disc	227203
	PNP transistor, 2N4889	562889	C203	0.02 μf, 500 v., 20% disc	227203
	NPN transistor, BF257	572100	C204	$0.1\mu f$, 100 v., 20% disc	224104
Q105	PNP transistor, 2N4889	562889	C205	0.1 μf, 100 v., 20% disc	224104
	PNP transistor, BC308B	567070	C206	$10,000 \mu f, 80 v.$ electrolytic	284109
Q107	NPN transistor, SE6020	577021	C207	$10,000 \mu f, 80 v.$ electrolytic	284109
Q108	NPN transistor, MPSA20, BC237A	577020			
Q109	PNP transistor, BC308B	567070	PL201	Lamp, #53	526053
Q110	NPN transistor, TIP31C (Select)	577131	PL202	Lamp, #53	526053
Q111	PNP transistor, TIP32C (Select)	567132			
Q201	NPN transistor, 2N5630	571105	S201	Switch, power	334021
Q202	PNP transistor, 2N6030	561357	mas		
		301037	T201	Transformer, power	464090

- 27(Select the last .33 ohm 5 watt resistor, cut the leads to $1^1/4^{\prime\prime\prime}$ (3.2 cm), and bend the leads almost 90° to its body. Connect one lead from the left to T-1 lug #6 at the tip (S). Position the resistor body to the left of the other .33 ohm resistor, leaving a small space between them. Connect the other lead to T-1 lug #3 at the base (S).
- 28()Prepare a $5\frac{3}{4}$ " (14.5 cm) yellow wire. Connect one end to hole #19 (S). Connect the other end to T-1 lug #4 at the tip.
- 29())Prepare a $2\frac{1}{2}$ " (6.5 cm) yellow wire. Connect one end to T-1 lug #4 at the tip (S-2). Connect the other end to Q2A lug E.
- 30()Select a diode, part #544012 (or 1N4003). Cut the lead on the *marked* end to ½" (1.3 cm), cut the other lead to ¾" (2 cm), and bend the leads 90° to its body. Connect the *marked* end lead to Q2A lug E (S-2). Connect the other lead to the notch in Q2A lug C.
- 31(N) Prepare a 4" (10 cm) blue wire. Connect one end to hole #17 (S). Temporarily insert a toothpick in hole #16, if desired. Bend a small hook around the other end, and connect it to Q2A lug C (S-2).
- 32(\times)Prepare a 3 $\frac{3}{4}$ " (9.5 cm) black wire. Connect one end to hole #20 (S). Connect the other end to Q2A lug B (S).

- 33()Prepare a $5\frac{3}{4}$ " (14.5 cm) black wire. Connect one end to hole #18 (S). Connect the other end to Q1A lug B (S).
- 34()Prepare a $5\frac{3}{4}$ " (14.5 cm) yellow wire. Connect one end to hole #21 (S). Connect the other end to T-1 lug #3 at the tip.
- 35()Prepare a $1\frac{3}{4}$ " (4.5 cm) yellow wire. Connect one end to T-1 lug #3 at the tip (S-2). Connect the other end to Q1A lug E.
- 36()Select another of the diodes, part #544012 (or 1N4003). Cut the lead on the *marked* end to $\frac{3}{4}$ " (2 cm), cut the other lead to $\frac{1}{2}$ " (1.3 cm), and bend the leads 90° to its body. Connect the *lead without marking* to Q1A lug E (S-2). Connect the marked end lead to the notch in Q1A lug C. Note that the marked end of this diode and the one connected to Q2A point in opposite directions.
- 37() Prepare a 5¾" (14.5 cm) blue wire. Connect one end to hole #24 (S). Temporarily insert a toothpick in hole #25, if desired. Bend a small hook around the other end, and connect it to Q1A lug C (S-2).

The work you have finished should look like the accompanying photograph.

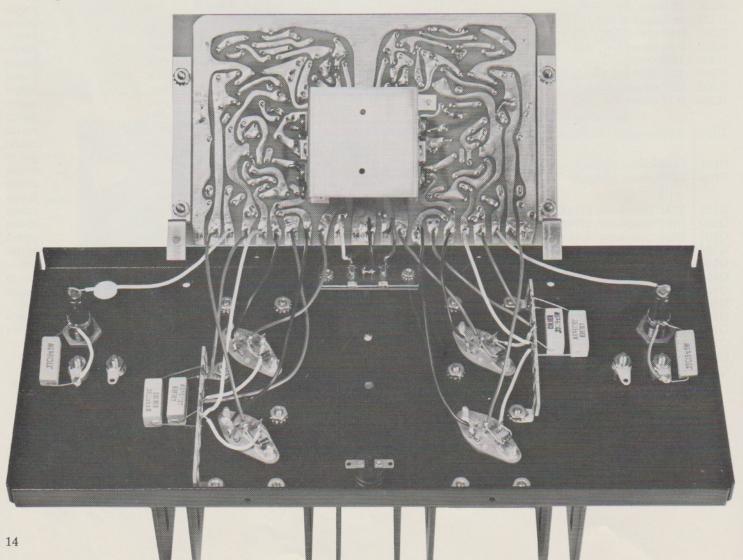

This completes the soldering to holes on the foil side of the PC-43 board, and to most of the connections on the back panel. Now you should check all your connections. See that no solder blobs or excess wire connects other than the intended terminal. Cut off any excess wire on the other side of a connection with your side cutters. Turn the assembly over and cut off any excess wire (more than $\frac{1}{16}$ "—.2 cm) from the soldered holes on the boards. Now shake it to remove any bits of solder or pieces of wire or insulation.

The following holes and lugs are without connection: PC-43 holes #1, #2, #11, #14, #16, #25 and #26; terminal strips T-1 lugs #1, #2 and #5, and T-2 lugs #7, #8 and #11; all black binding posts; the thermal breaker.

- 38(X)Select the last two #6 screws and two KEP nuts. Gently but firmly turn the entire PC-43 board on its connected wires until the board is approximately in its final position parallel to the inside of the back panel. Insert screws in the small holes in the back panel near the bottom from the outside (ignore the holes in the flanges), then through the holes in the Z-brackets, and secure the brackets to the back panel with the nuts on the inside. See that the wires do not interfere with the Z-brackets or the U-shaped heat sink attached to PC-43. The screws should remain finger tight until the next step.
- 39(X)Select two black sheet metal screws with Phillips heads. Insert the screws in the back panel below the thermal breaker from the outside, and then through the holes in the U-shaped heat sink attached to PC-43. Securely tighten this hardware and the screws connecting the Z-brackets to the back panel.

WIRING THE CHASSIS

Set aside the back panel, and place the main chassis assembly in front of you, positioned as shown in the Pictorial Diagram.

- 1(X)Select the red-yellow transformer lead. Remove enough additional insulation from the free end to have 13/8" (3.5 cm) of bare wire. Twist the wire strands tightly together, and feed the wire from the left through the solder lug GL1 at the base of capacitor C2 to the solder lug GL2. Solder both connections very securely, as this is the main ground connection for the amplifier. "Tin" the wire between GL1 and GL2 with solder and your hot iron so that the wire is solid and shiny.
- 2()Prepare a 7½" (19 cm) yellow wire, but remove 1" (2.5 cm) of insulation from one end and the usual ½" (.6 cm) from the other. Feed the long-stripped end from the right through B+ fuse block lug #3 to lug #2, and then solder both connections. This block lies between the pair of large capacitors, C1 and C2. Connect the other end to C2 lug #3.
- 3(Select one of the 10,000 ohm, 1 watt resistors (brownblack-orange), bend its leads almost 90° to its body, and cut the leads to $\frac{5}{8}$ " (1.6 cm) each. Connect one lead to C2 lug #3. Connect the other lead to C2 lug #4.
- 4(\times) Select one of the .1 μf disc capacitors, and cut its leads to 3/4" (2 cm) each. Do not confuse it with the .02 μf disc capacitors, which look similar. Connect one lead to C2 lug #3. Connect the other lead to C2 lug #4.

- 5(X) Prepare a 7½" (19 cm) yellow wire in the usual manner. Connect one end to C2 lug #3 (S-4). We suggest crimping this wire around the lug if the lug hole is already filled with wires. Connect the other end to diode block lug #3 (S). A considerable amount of heat is required to solder the lugs on the diode block
- 6(\(\)) Prepare a 5\(\)/4" (13.5 cm) orange wire, but remove \(\)/2" (1.3 cm) of insulation from one end, and the usual from the other. Connect the short-stripped end to C2 lug \(\)#4 (S-3). Bend a hook at the other end, and connect it to the right end of the bare wire between GL1 and GL2 (S). Although a total of 7 wires will eventually be connected to this bare wire, we recommend soldering each one individually.
- 7(\(\)) Prepare a 2\(\)\(\)2'' (6.5 cm) blue wire in the usual manner. Connect one end to B+ fuse block lug #4 (S). Connect the other end to B+ fuse block lug #1.
- 8(\nearrow) Prepare a 6¾" (17 cm) blue wire. Connect one end to B+ fuse block lug #1 (S-2). Connect the other end to C1 lug #2.
- 9(X)Select the last 10,000 ohm, 1 watt resistor (brownblack-orange), bend the leads almost 90° to its body, and cut the leads to $\frac{5}{8}$ " (1.6 cm) each. Connect one lead to C1 lug #2. Connect the other lead to C1 lug #1.
- 10(Select the last .1 μ f disc capacitor, and cut the leads to $^{3}\!/^{\!\!\!/}$ (2 cm) each. Connect one lead to C1 lug #2. Connect the other lead to C1 lug #1.
- 11(\times)Prepare a 12" (30.5 cm) blue wire. Connect one end to C1 lug #2 (S-4). Crimp this wire around the lug if the lug hole is filled with wires. Connect the other end to diode block lug #1 (S).
- 12() Prepare a 9" (23 cm) orange wire, but remove \frac{1}{2}" (1.3 cm) of insulation from one end, and the usual from the other. Connect the short-stripped end to C1 lug #1 (S-3). Bend a hook at the other end, and connect it to the left end of the bare wire between GL1 and GL2 (S).

The next two steps refer to the connection of the two lamp sockets on the front panel. If the MC-2 meter assembly kit has been obtained and is to be installed, skip these two steps.

13(N)Prepare a $13\frac{1}{2}$ " (34 cm) black wire, but remove $\frac{3}{8}$ " (1 cm) of insulation from one end, and the usual from the other. Also prepare a 5" (13 cm) yellow wire in the usual manner. Start with the short-stripped black wire 23/4" (7 cm) longer than the yellow wire, and twist them uniformly together to within 3/4" (2 cm) of the other end of the yellow wire. This twisted pair, as well as the other twisted wires in this kit, should be uniformly twisted 3 full turns every 2" (5 cm). Connect the short-stripped end of the black wire to lamp sockets lug #1 (S). Connect the corresponding end of the yellow wire to lamp sockets lug #4 (S). Position the twisted wires as shown in the Pictorial Diagram, and connect the other end of the yellow wire to diode block lug #2. Bend a hook around the corresponding end of the black wire, and connect it next to the other wire near the right end of the bare wire between GL1 and GL2 (S).

14()Select the remaining diode, part #544012 (or 1N4003). Connect one (either) lead to lamp sockets lug #3 (S). Connect the other lead to lamp sockets lug #2 (S). The leads will just reach if they are not cut. Note that the position of the marked end of this diode is not important.

The secondary voltage leads of the power transformer comprise two red leads, two orange leads, and one red-yellow lead. Each may be shortened appropriately before connection if you wish.

- 15() Twist together the two red leads. Do not confuse them with the orange leads, which will be called for in the next step. Connect one (either) red lead to T-4 lug #4 at the tip (S). Connect the other red lead to T-4 lug #3 at the tip (S).
- 16()Twist together the two orange leads. Connect one (either) orange lead to diode block lug #4. Connect the other orange lead to diode block lug #2. You may wish to solder these connections now, even though another lead will be connected to each in the next step.
- Select one of the .02 μ f disc capacitors, and cut the leads to $\frac{3}{4}$ " (2 cm) each. Strip a 1" (2.5 cm) piece of insulation from the black wire, and cut the insulation in two equal pieces. Slip a piece of insulation on each lead of the capacitor. Connect one lead to diode block lug #2 (S-3). Connect the other lead to diode block lug #4 (S-2).
- 18(A) Strip the insulation from a 1" (2.5 cm) orange wire, and bend the bare wire in a ½" (1.3 cm) wide "U". Connect one end to power switch lug #3, and the other end to power switch lug #4.
- 19()Select the last .02 μf disc capacitor, and cut its leads to 3/8" (1 cm) each. Connect one lead to power switch lug #3. Place the capacitor atop the switch, and connect the other lead to power switch lug #2.

The primary voltage leads of the power transformer are connected in parallel for 120 volts AC line, or in series for 240 volts AC line. They comprise the black, the black-white, the violet, and the violet-yellow leads.

20(Select the violet and the violet-yellow leads from the power transformer, cut them to 5" (13 cm) long each, and prepare their ends. Twist the leads together, and connect one (either) to power switch lug #3 (S-3). Connect the other to power switch lug #4 (S-2).

NOTE: If this unit is to be used with 240 volts AC line, connect only the violet-yellow lead to power switch lug #4 (S-2). Also solder power switch lug #3 (S-2). Then shorten the black-white lead to 5" (13 cm) and prepare its end. Twist the violet and the black-white leads together, and connect them both to T-3 lug #2 at the tip (S-2).

21(Select the black and the black-white leads, cut them to 5" (13 cm) long each, and prepare their ends. Twist the leads together, and connect them both to T-3 lug #1 at the base (S-2).

NOTE: If this unit is to be used with a 240 volts AC line, connect only the black lead to T-3 lug #1 at the base (S).

FINAL ASSEMBLY

1()Select the back panel assembly, and two black sheet metal screws with Phillips heads. Place the panel in position at the back edge of the chassis. Insert the screws only in the corner hole at each end. The screws cut their own thread and therefore some force is required. Do not tighten the screws completely so the panel can be tilted outward for working.

In the steps following connections will be completed between the PC-43 board or other parts on the back panel and parts on the main chassis. Connections to the boards should be made from the components side.

- 2() Prepare a 6" (15.5 cm) black wire, but remove $\frac{3}{8}$ " (1 cm) of insulation from one end, and the usual from the other. Connect the short-stripped end to black binding post lug #3 (S). Bend a hook at the other end, and connect it next to another wire at the right end of the bare wire between GL1 and GL2 (S).
- 3(N) Prepare a 10" (25.5 cm) black wire, but remove 3/8" (1 cm) of insulation from one end, and the usual from the other. Connect the short-stripped end to black binding post lug #2 (S). Bend a hook at the other end, and connect it next to another wire at the left end of the bare wire between GL1 and GL2 (S).
- 4() Prepare a 3½" (8.5 cm) black wire, but remove ½" (1 cm) of insulation from one end, and the usual from the other. Connect the short-stripped end to PC-43 hole #1 (S). Bend a hook at the other end, and connect it next to another wire near the right end of the bare wire between GL1 and GL2 (S).
- 5() Prepare a 7" (18 cm) black wire, but remove 3/8" (1 cm) of insulation from one end, and the usual from the other. Connect the short-stripped end to PC-43 hole #26 (S). Bend a hook at the other end, and connect it next to another wire near the left end of the bare wire between GL1 and GL2 (S).
- 6 (Normal Prepare a 4" (10 cm) blue wire. Connect one end to PC-43 hole #2 (S). Connect the other end to B+ fuse block lug #5 (S).
- 7(Prepare a 3" (8 cm) yellow wire. Connect one end to PC-43 hole #11 (S). Connect the other end to B+ fuse block lug #6 (S).
- 8(N) Prepare another 3" (8 cm) yellow wire. Connect one end to PC-43 hole #16 (S). Connect the other end to B+ fuse block lug #7 (S).
- 9()Prepare a 4" (10 cm) blue wire. Connect one end to PC-43 hole #25 (S). Connect the other end to B+ fuse block lug #8 (S).

See that each of the 7 wires connected to the bare wire between GL1 and GL2 is securely soldered. This is the main ground connection for the entire amplifier.


10) Prepare two 16½" (42 cm) orange wires. Start with one wire ½" (1.3 cm) longer than the other wire, and twist them uniformly together. (At the other end, one wire will be ½" (1.3 cm) longer than the other.)

Connect the longer wire at one end to thermal breaker lug #2 (S). Connect the corresponding end of the other wire to thermal breaker lug #1 (S). Position the twisted wires around the left edge of PC-43, down to the bottom of the back panel, and across the chassis toward the front. Connect the longer wire at the free end to T-3 lug #1 at the tip (S). Connect the remaining free end to power fuse block lug #1 (S).

11() Install the four 4 ampere fuses in the B+ fuse block.

This completes the soldering to the holes on the PC-43 board, and to the entire assembly, except for the connection of the line cord. Notice that hole #14 only on the board is without connection. Turn the assembly over and shake it to remove any bits of solder or pieces of wire or insulation. Leave the assembly upside down.

- 12(Select two black sheet metal screws with Phillips heads. Tilt the back panel into its upright position and secure it to the bottom of the chassis with the screws. Tighten all four screws used to secure the back panel to the chassis.
- 13(X) Select the line cord and the strain relief. Separate the two conductors of the line cord for about 2" (5~cm) . Strip 1" (2.5~cm) of insulation from one conductor, and $^{1}\!\!/_{4}$ " (.2~cm) from the other. Mark the line cord $10^{1}\!\!/_{2}$ " (27~cm) from the stripped end with a pencil or pen. Bend the cord sharply back on itself at the marking so that a "V" is formed. Install the strain relief as shown in the sketch below. The small end of the strain relief faces the stripped end of the wire. With heavy pliers, crimp the two halves of the strain relief together around the wire to partially shape the wire before insertion. Now grasp the larger diameter portion of the strain relief with the tips of the pliers, squeeze it fully closed, and insert the combination from the outside of the back panel in the remaining large hole. Notice that the hole has slightly flat vertical sides, and therefore the strain relief installs easily in the cutout with the cord horizontal. The strain relief snaps into its locked position when fully inserted.

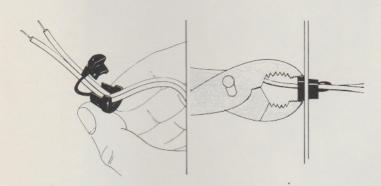

- 14()Select the conductor with 1" (2.5 cm) of insulation removed. Feed it through power switch lug #1 to power switch lug #2. Solder both lugs.
- 15()Select the remaining conductor. Connect it to fuse block lug #2 (S).

This completes the wiring of your Stereo 150. You should check carefully for any insecure connections, and for any possibility of bare wires contacting other than the intended terminal. Turn the unit upside down and shake out any bits of solder or pieces of wire or insulation.


- Install the two #53 bayonet lamps in the lamp brackets on the front panel. They merely push in and turn. [If meters are being installed, skip this step, and refer now to the MC-2 instructions before continuing with the next step.]
- 17() Install the 5 ampere slo-blo fuse in the power fuse block. (With 240 v AC line wiring, use 2.5 ampere slo-blo fuse.)
- 18()Install the two 3 ampere fuses in the speaker fuse holders on the back panel.
- Select the cardboard light shield, and bend it in a "U" shape at its score markings. Install it over the lamp sockets on the front panel. To hold it in place, one side of the "U" should be slipped between the chassis and the flange of the front panel, which may require loosening one or two of the black sheet metal screws before insertion. Tighten the hardware securely after installation. [If meters have been installed, ignore this step.]

Prior to installing the decorative front plate, the cover, and the wood side panels, you may wish to test the amplifier. See that the power switch is turned off, plug the line cord into a wall outlet, and turn the power switch on. It is safe to operate the Stereo 150 without connection to the inputs or the outputs. If the lamps glow and the fuses hold, there are no gross faults. Unplug the amplifier and finish your work. If the fuses fail, check your wiring and refer to the IN CASE OF DIFFICULTY section of this manual.

- 20()Select the extruded aluminum front plate, and the self-adhesive decorative aluminum strip. Place the extruded plate in front of you. Peel off the backing from the strip. Using the ends and bottom lip of the front plate as a guide, affix the strip to the plate. Since the strip cannot be moved once it is installed, you may wish to first try a "dry run" with the backing in place prior to final installation. [If meters have been installed, select instead the self-adhesive strip supplied with the meter kit, and install it as described above.]
- 21()Select the small piece of blue plastic. Turn the front plate over, and affix the plastic in the rectangular POWER opening. The adhesive on the back of the decorative strip will hold the plastic flat against it. [If meters have been installed, skip this step.]
- 22()Install the front plate on the front panel by securing it with the remaining five flat head screws and nuts. Insert the screws from the front through the *counter-sunk* holes, and tighten the nuts on the inside.
- 23()Install the fiber-backed decorative insert in the top section of the front plate. It slides in place from either end. [If meters have been installed, insert instead the dark plastic strip supplied with the meter kit.]
- 24() Make sure the back panel is clean under the Dynaco address. Remove the backing from the serial number label and affix it to the back panel under the address.

The general placement of wires should conform closely to the photograph below of the inside of the chassis.

- 25()Slide on the cover so that its bottom flanges fit inside the chassis, and the perforated section lies over the circuit board at the back. Secure it with the remaining seven black Phillips head sheet metal screws—3 screws at the front and 4 at the back. CAUTION: Sheet metal screws are *not* used between the cover and the chassis.
- 26()Install the two wood panels on the sides of the unit. The cutout section in the wood faces front, and notice that one panel is drilled for the left side, and the other for the right. Use the remaining six flat black washers and the six 5/8" #6 black Phillips head screws.
- 27()Remove the protective tape, if used as suggested earlier, from the edges of the heat fins.

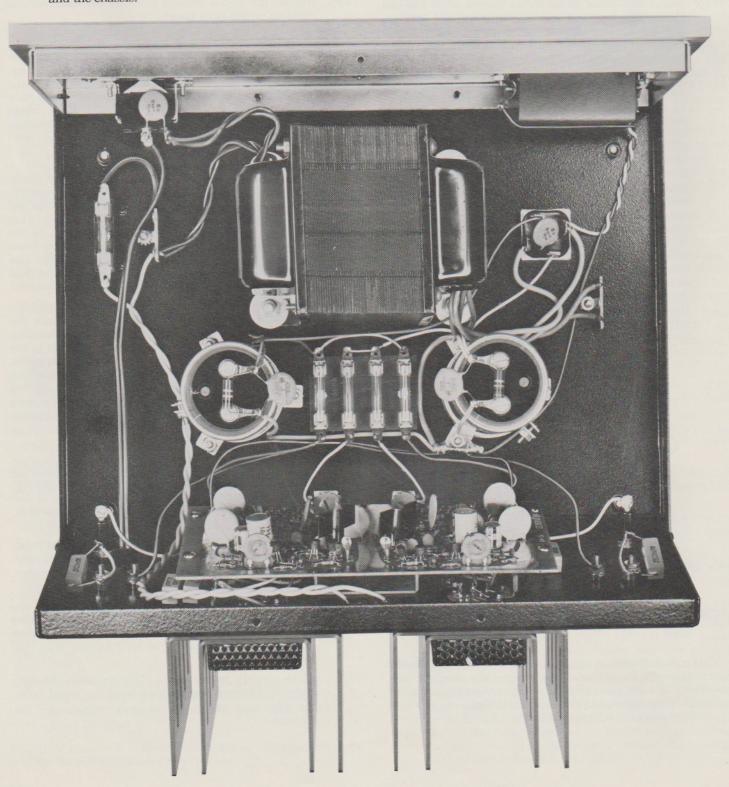

COMBINING CHANNELS

An individual channel of the Stereo 150 may be operated at any time, provided there is no input signal to an unused channel. There is no need for any load resistor on an unused channel, for the design is completely stable.

By internal strapping on the PC-43 board, and some wiring changes to other parts of the amplifier, it is practical to combine channels for one channel (mono) operation. This connects the outputs in *parallel*. Moreover there are TWO modes of connection for mono use. These are:

- 1. Low Impedance Mode—optimum matching for multiple speakers connected in parallel for 2 ohms or 4 ohms, or for speakers having a nominal rating of 4 ohms, but which fall below that rating. Power output is 150 watts @ 4 ohms, with F.T.C. preconditioning.
- 2. High Impedance Mode—optimum matching for speakers having an 8 ohms or 16 ohms rating, but which do not fall much below 8 ohms. Power output is 150 watts @ 8 ohms, with F.T.C. preconditioning.

Because of the several wiring changes required, conversion to mono operation is considered "permanent", although it is possible to restore all the original connections, if desired.

LOW IMPEDANCE CONVERSION

- 1()Remove the two black sheet metal screws with Phillips heads which secure the back panel to the bottom of the chassis. The back panel can now be tilted outward for working.
- 2()Unsolder and remove the small jumper wire J1 on the PC-43 board. It is located to your right of the right Q4 transistor, as viewed from the back. Although there are two Q4 transistors on the board, only one has a jumper adjacent to it. Also remove the solder from the lower hole of J1 with your hot iron and a wood toothpick.
- 3()Prepare a 1³/₄" (4.5 cm) black wire. Connect one end to the lower hole of J1 (S). Remove the solder from the hole adjacent to the Q4 transistor on the *left* side, and connect the other end of the wire to the hole (S). Notice that a dotted line on the board links these two holes.
- 4()Remove the two black sheet metal screws which secure the U-shaped heat sink on PC-43 to the back panel. Also remove the hardware which connects each Z-bracket to the back panel. The PC-43 can now be tilted forward to work on some back panel connections.
- 5() With side cutting pliers, snip out and remove the short blue wire between speaker fuse holder lug #4 and red binding post lug #4. The .27 ohm, 5 watt resistor connected between these lugs should not be removed.

- 6() In a similar manner, snip out and remove the short yellow wire between speaker fuse holder lug #1 and red binding post lug #1. The .27 ohm, 5 watt resistor should not be removed.
- 7()Prepare a 13" (33 cm) yellow wire. Connect one end to red binding post lug #4 (S-2). Connect the other end to red binding post lug #1 (S-2).

This completes the modification for low impedance stereo operation. Reinstall all the hardware.

HIGH IMPEDANCE CONVERSION

To modify the QSA-300 for high impedance stereo operation, first complete all seven steps outlined above for LOW IMPEDANCE CONVERSION. The following steps are also required:

- 8()Strip the insulation from a 1½" (4 cm) piece of black wire, and cut the bare wire into four equal size pieces. Bend each wire into a ½" (.3 cm) wide small "U".
- 9()On PC-43, locate the four *pairs* of unused holes which are marked "mono jump". One pair is horizontally oriented about $1\frac{1}{2}$ " (4 cm) above hole #6; a second is vertically oriented about $\frac{3}{4}$ " (2 cm) above hole #7; a third is horizontally oriented about $\frac{3}{4}$ " (2 cm) above hole #19; a fourth is horizontally oriented about $\frac{1}{2}$ " (4 cm) above holes #20 and #21. Remove the solder from each hole, and install the small U-shaped wires between each pair of holes. Solder all 8 holes securely.
- 10()Interchange the connection of the pairs of the orange and the red leads of the power transformer, and solder each connection securely. When completed, one red lead should connect to diode block lug #4; a second red lead should connect to diode block lug #2; one orange lead should connect to T-4 lug #4; a second orange lead should connect to T-4 lug #3.
- 11()Disconnect the yellow lead at diode block lug #2, and connect it to T-4 lug #4 (S-2). [If meters have been installed, ignore this step.]

This completes the modification for high impedance mono operation. Reinstall all the hardware.


When connected for low impedance or high impedance mono operation, use only the Channel A *input* (Channel B input is disconnected). Although Channel A and Channel B *outputs* are connected in parallel, we recommend using Channel A output for consistency. In addition, the values of the speaker fuses should be cut in half. For example, if the manufacturer of your speaker recommends a 2 ampere fuse for its protection, each speaker fuse in the Stereo 150 should be changed to 1 ampere.

240 VOLTS AC LINE CONNECTIONS

The power transformer supplied in the Stereo 150 may be connected for a 220-240 volts AC line, as well as for the standard 120 volts AC line (the transformer is wired for 120 volts use unless this manual and the outer shipping carton are marked "240 volt"). The transformer has dual primary windings. They are connected in parallel for 120 volts, and in series for 240 volts. The notes to steps 20 and 21 on page 16, the sketch at right, and the schematic diagram on page 12 detail the 240 volts connections.

The 5 ampere slo-blo fuse supplied with 120 volts wiring should be replaced with a $2\frac{1}{2}$ ampere slo-blo fuse when it is wired for 240 volts use.

This amplifier may be used with either 50 or 60 Hz current.

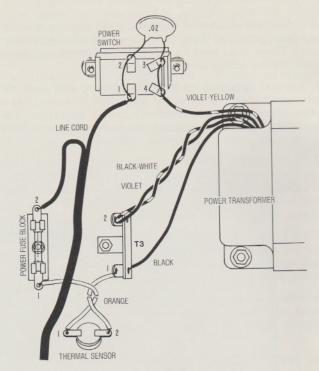

IN CASE OF DIFFICULTY

If there is an initial fault with your component system, or one develops in use, separate units enable relatively easy diagnosis of the source of the problem. Before blaming the electronics, check the connections on all components, particularly carefully on the preamplifier. See that the connections agree with the instructions supplied for each component. Check on the preamplifier that the monitor switch is in its normal or "input" position. If the Dynaco PAT-5 is used, also see that the E.P.L. switch is in its normally "out" position.

If neither channel works with any program source (phono, tuner and tape), it is unlikely that all sources would be faulty. To test whether the problem lies in the preamplifier, temporarily connect the audio cables from the tuner or tape deck to the inputs of the Stereo 150. Use the volume control or level set on the tuner or deck to adjust volume. If the system operates without the preamplifier, even after double checking its connections, the preamplifier is at fault. If the system is still defective, check the speaker fuses on the back panel of the Stereo 150 and the speaker connections at both ends. Also, if the amplifier's heat sinks are very warm, allow the unit to cool off and try again, for the thermal breaker may have shut down the amplifier. If the amplifier is cool, and if the connections and the speaker fuses are all right, the fault lies in the Stereo 150.

A fault in only one channel suggests interchanging the audio cables channel for channel to determine the problem. If the fault occurs with only one sound source, such as phonograph, the problem cannot lie in the Stereo 150. Interchange the phono cables at the preamplifier. If the fault reverses channels, the problem is in the source. Check the phono cables, the connection of the cartridge in its mounting shell, and the connecting pins between the shell and the tone arm.

If the fault lies in one channel with any sound source, check the cables between the preamplifier and the Stereo 150, as well as the speaker wires and the speaker fuses. If these are not defective, connect the tuner or tape deck directly to the Stereo 150. If the problem goes away, the fault is in the preamplifier. If the fault remains, interchange the speakers channel for channel. If the problem follows a given speaker, the speaker is faulty. If the problem remains in the same channel regardless of the location of the speakers, one channel of the Stereo 150 is faulty.

Because 90% of the difficulties encountered with kit-built units can be attributed to incorrect wiring or poor solder connections, it is strongly recommended that you ask someone else to check your wiring against the Pictorial Diagram, for one person will frequently make the same error repeatedly.

There are certain general precautions to be observed when servicing any semiconductor equipment:

- Never make circuit changes of any kind when the amplifier is turned on.
- 2. Be particularly careful not to short any transistor leads to each other or to the chassis when the power is on.
- 3. When using test equipment, you must avoid transient voltage peaks and excessive test voltages.
- 4. Exercise caution when soldering and unsoldering semiconductor leads to avoid excessive heat.

If circuit difficulties are encountered with the Stereo 150, the average kit builder will not likely be able to locate the source of the problem. DO NOT ATTEMPT TO SERVICE THIS AMPLIFIER UNLESS YOU HAVE THE KNOWHOW AND SUITABLE TEST EQUIPMENT.

CHECKING SEMICONDUCTORS

An ohmmeter can sometimes serve as a gross check for transistor or diode failure. The device must be removed from the circuit. Diodes should have a high resistance in one direction (probe polarity) and a low resistance in the other.

Transistor types vary widely in resistance, but a (near) short circuit indicates probable failure. Readings from base to collector should be similar to those from base to emitter. Both will have a higher reading with one probe polarity than with the reverse orientation. NOTE: Some types of solid state meters do not provide enough probe voltage to forward bias a silicon junction. Hence, a high resistance reading may be obtained in both directions.

Such gross checks can only ascertain clearly faulty semiconductors. More sophisticated test equipment, or direct substitution is necessary to qualitatively evaluate their performance.

TESTS

The availability of a VTVM, TVM, or VOM with at least 20,000 ohms per volt sensitivity will enable you to make some checks to minimize the likelihood of trouble. Since the PC-43 circuit board has been checked in actual operation prior to packing into the kit, a component fault there is not likely. However, a splash of solder, poor or wrong connections, or broken or shorting component leads can result in failure.

The following resistance reading should be made with the amplifier unplugged, and with all four B+ fuses and the two speaker fuses removed from the circuit:

1. From the rear of the B+ and B- fuse clips to ground: over 4,000 ohms.

Large variations are possible because of differences in types of meters, and variations in output transistors.

If a reading is low, remove the two wires on PC-43 which correspond to the trouble source. (B+ for left channel is holes #2 and #3; B- for the left channel is holes #10 and #11; B+ for the right channel is holes #24 and #25; B- for the right channel is holes #16 and #17.) Check from these holes to ground, and the associated output transistor to determine which is causing the low reading. If the board is at fault, check for solder splashes, bad connections, or defective components. If the output stage is at fault, check for shorts between the transistor case or its pins and the heat sink, or for a defective transistor.

If the reading is very high, examine the circuit for open connections or an open transistor on the board or output stage.

NO SOUND OUTPUT

A blown fuse is the most likely cause of interrupted sound in one (or both) channels. First check the speaker fuses, then the power fuse, and finally the B+ fuses. A failed speaker fuse usually indicates that you have driven the system at a high enough level to "open" the fuse. Replacement should restore sound. However, the failure of either the power fuse or the B+ fuses usually indicates more than routine difficulty. When one of these fail, take B+ and B- resistance readings, as outlined above, to find the source of the trouble.

BIAS ADJUSTMENT

The output bias current has been set at the factory, and should remain in proper adjustment for the life of the amplifier. However, should you wish to check the output bias, the following procedure should be followed:

- Remove the input connections, and also the load from the output connections.
- 2. Remove the B+ fuse (each outer fuse of the 4 clip fuse block) from the channel to be adjusted (you should not remove the B- fuse).
- Connect the "+" lead of an ammeter to the front fuse clip, and the ground lead to the rear fuse clip. Avoid shorting out the leads or allowing them to make intermittent connections.
- 4. Turn the unit on, wait about 10 seconds, and adjust the B+ current (trimpot P102) for approximately 75 milliamps.
- 5. Leave the amplifier on for 10 minutes until operating temperatures have stabilized. With a volt meter connected to the output terminals, set the center line voltage (trimpot P101) for 0 volts (±20 millivolts).
- 6. Once again check the B+ current. It should still be about 75 milliamps. If not, readjust to that value.

Repeat the procedure for the other channel. Since the amplifier's temperature will have been stabilized, wait only 2-5 minutes before adjusting the center line and finally rechecking the B+ current.


NOTE: The actual current through the output transistors is 25 milliamps less than the total B+ current through the output stage. By adjusting the B+ current for 75 milliamps, optimum bias of 50 milliamps is achieved.


VOLTAGES AND PC-43 BOARD LAYOUT

The chart below lists the voltages and the location of the test points. The values are based on a 120 volts, 60 Hz line, amplifier connected in stereo, shorted input and no load connected to the output. All voltages are with respect to circuit ground (GL1, GL2). Tolerance: 20%.

VOLTAGE	PICTORIAL CIRCUIT LOCATION			
37 v. AC	Diode Block lug #2, #4			
48 v. AC	Terminal Strip T-3 lug #4, #5			
+50 v. DC	Capacitor C-1 lug #2 B+ Fuse Block lug #1, #4, #5, #8			
-50 v. DC	Capacitor C-2 lug #3			

NOTE: When measuring voltages, it is important to take volt meter accuracy into account. Most volt meters are specified for accuracy with respect to the range selected. This means, for example, that a voltage reading on $\pm 5\%$ meter could be off by ± 5 volts on the 100 volt range. In the Stereo 150 this could imply an incorrect indication when measuring the DC supply, which has been specified ± 10 volts (with a 120 volt line). Even if the voltages were exactly 50 volts, a $\pm 5\%$ meter reading could indicate a voltage from 35 to 65 and still be within the specifications of both the meter tolerance and the voltage tolerance. It is therefore necessary to always consider the tolerance of both the voltage being measured and of the measuring instrument.

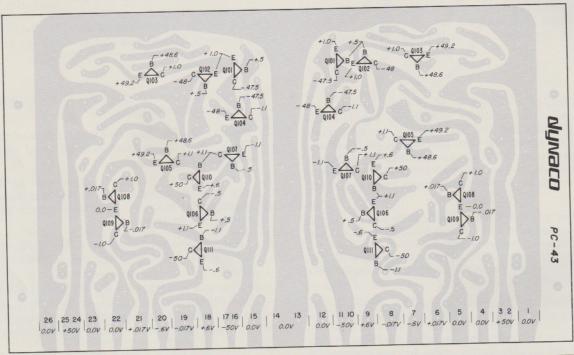

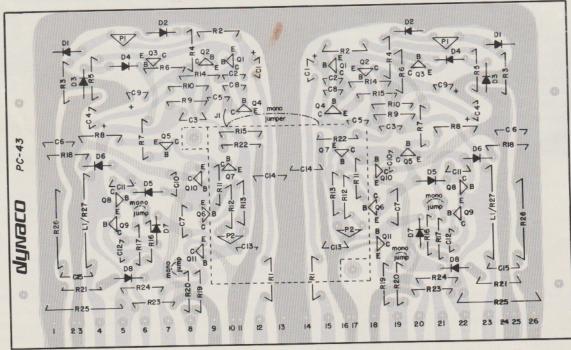

SERVICE POLICY AND LIMITED WARRANTY

The Stereo 150 has been carefully engineered to provide many years of musical enjoyment without difficulty. Each factory-assembled Stereo 150 has been subjected to a full complement of performance tests prior to shipment. The PC-43 circuit board in the kit has been tested and adjusted in operation as a fully functioning unit to verify its performance capability. Nevertheless, through damage in transit, faulty kit assembly, or human error, service may sometimes be required.

To provide rapid and reliable service, Dynaco has authorized competent, well-equipped service facilities in several localities in the United States and Canada, in addition to its service facility at the factory. These stations are authorized to make repairs in and out of warranty under the terms listed below. Service is always available at the factory, but you will often find a more convenient facility locally. A current list of these facilities is enclosed. Write to Dynaco for the name of the service station nearest you.

It is the owner's responsibility to take or send the unit freight prepaid to the service facility. A dated bill of sale must be submitted. In the event that you incorrectly diagnose which unit is faulty, please understand that you will be responsible for a check-out charge on any properly performing kit or factory-assembled unit submitted for testing.

Shipment should be made via United Parcel Service (Express in Canada), whenever possible. Do NOT USE PARCEL POST FOR IT IS NOT A SAFE METHOD OF SHIPPING ELECTRONIC EQUIPMENT. Should damage occur because of parcel post shipment, repairs will be made at the owner's expense, as neither the factory nor the service stations has the facilities to process parcel post claims. Insure the carton for the full value of a factory wired Stereo 150.

When shipping the amplifier be careful to pack it securely in the original (or larger sturdy) carton. Include with the returned unit the following information:

- Your name and complete shipping address (Post Office box numbers are not suitable);
- 2. The serial number (from the cover of this manual), together with a copy of your dated bill of sale;
- 3. The symptoms, complete, but preferably brief. If the problem is intermittent, this *must* be noted.

Once service work has been performed, an additional 90 day warranty on the service work is provided.

Warranties apply to the original purchaser only; they are not transferable. They do not apply to units which have been physically or electrically abused, or to units which have been modified without prior written factory authorization. The use of non-Dynaco replacement parts may in some instances void the warranty. If you suspect a defect in the power transformer, the leads must be unsoldered, not cut for its return. The warranty on the transformer is void if the leads have been cut too short for re-use.

Dynaco maintains a Technical Services Department to help you locate the source of, and possibly correct a problem yourself. When writing, mention the serial number of the Stereo 150 and any tests you have performed.

WARRANTY FOR KIT-BUILT UNITS

The components in a Stereo 150 kit are warranted for a full year from the purchase date. If a defective component is found in a completed circuit board module, or kit, simply return that individual part to the *factory* prepaid, and it will

be replaced at no charge. Local service stations are not obligated to supply separate parts.

If you cannot locate the source of the difficulty, ship the entire Stereo 150 to the nearest authorized service station or to the factory for service. A dated bill of sale must be submitted. In-warranty parts will be replaced at no charge, although a service fee will be charged for the labor to diagnose, correct, and test the unit to ensure that it meets factory specifications. Shipping charges to and from the service facility are the owner's responsibility. Units will be returned on a COD basis via UPS wherever possible.

The return of a single circuit board for service to the factory or to an authorized service station is not adequate to assure proper operation, and a single circuit board submitted for repair will be returned unserviced.

This warranty is void if the kit has not been completely assembled, or if other than rosin core solder has been used. Units assembled with acid core solder or paste flux will be returned unserviced.


WARRANTY FOR FACTORY ASSEMBLED UNITS

The Stereo 150A is warranted for a full year from the purchase date, including parts and labor, and shipment costs from the service facility to the owner (within the U.S. or Canada). The owner is responsible for shipment to the service facility, and must submit a copy of the dated bill of sale.

SERVICE BEYOND THE WARRANTY PERIOD

Dynaco establishes maximum labor fees which may be charged by its service facilities (plus the cost of parts, and shipping charges) without prior approval by the owner. A current list of authorized service stations, and the current established fee for any unit will be supplied by Dynaco on request. Dynaco cannot assume responsibility for service at other than *Dynaco authorized service stations*.

Dynaco reserves the right to limit the service facility or the established fees to two years from the date of purchase. Dynaco assumes no liability or responsibility for injury or damages sustained in the assembly or operation of this equipment, or for damage to other equipment connected to it. Dynaco reserves the right to make design changes without the obligation to revise prior versions. Prices and specifications subject to change without notice.

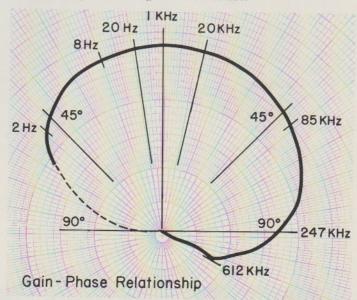

PARTS LIST

Parts of a similar type which do not change performance will sometimes be included as a matter of expediency. This will account for slight variations in value and appearance. To avoid a shortage, extra hardware may be included for some sizes.

		PART#			PART #
1	Back Panel, black, aluminum	711153	1	Lamp Insert, plastic sheet, blue	811003
1	Chassis, black, steel	711028	1	Light Shield, grey fishpaper	871016
	Cover, black, steel (for chassis)	711030	4	Fuse, 4 ampere, AGC/3AG	342004
	Cover, black, perforated (for transistors)	711031			
	Front Panel, plated, steel	711152			
1	Front Plate, aluminum extrusion	769150			
1	Front Plate, insert, bottom section	767004	Die	de-Resistor Assembly	997176
1	Front Plate, insert, top section	769005	Dio	de-Resistor Assembly	33/1/0
	Heat Fin, black, aluminum	767006	2	Capacitor, .1 µf disc	224104
1	Panel, wood, left side	867038	2	Capacitor, .02 µf disc	227203
1	Panel, wood, right side	867138	5	Diode, plastic, small, 1N4003	544012
-	Tanci, Hood, II-Birthian		2	Fuse, 3 ampere, AGC/3AG	342003
2	Binding Post with hardware, black	315001	1	Fuse, 5 ampere, Slo-Blo, AGC/3AG	342050
2	Binding Post with hardware, red	315002	2	Lamp, bayonet #53	526053
	Bracket, Z-shape, audio circuit board	717016	4	Resistor, 0.33 ohms, 5 watts	120033
2 2	Bracket, round, capacitor	717003	2	Resistor, 0.27 ohms, 5 watts	120027
2	Capacitor, 10,000 µf	284109	2	Resistor, 10,000 ohms, 1 watt	
1	Circuit assembly, PC-43 board	957043		(brown-black-orange)	115103
1	Diode Block, rectifier	544504			
4	Foot, rubber	859004			
2	Fuse Holder, round, with hardware	341001			
1	Fuse Holder, rectangular, single clip	341003			
1	Fuse Holder, block type, 4-clip	341010			
1	Label, serial number, kit	898011	Har	rdware Asssembly	997177
1	Line Cord	322092	5	#4-40 x 3/8 oval head machine screw	611265
2	Socket, lamp	386001	5	#4-40 KEP nut (lockwasher attached)	615244
4	Socket, transistor	353001	9	#4-40 KEP Hut (lockwasher attached)	013244
1	Socket Strip, dual input	355012	00	"0.00 1/	611005
1	Switch, power, black rocker	334021	28	#6-32 x ½ oval head machine screw	611385
2	Terminal Strip, 6 lugs	375010	1	#6-32 x ³ / ₄ oval head machine screw	611325
2	Terminal Strip, 2 lugs	372002	9	#6-32 x 3/8 flat head machine screw	611364
1	Thermal Breaker	342011	6	#6-32 x 5/8 Phillips head machine screw	611206
1	Thermal Compound, capsule	945004	0	(black)	611306 612304
2	Transistor, 2N6030 or 2N6031	561357	8.	#6 x 3/4 sheet metal screw (blunt tip)	612304
2	Transistor, 2N5630 or 2N5631	571105	17	#6 x 3/8 Phillips head sheet metal screw	612367
1	Transformer, power	464090	0	(black)	616363
1	Strain Relief, black plastic	895001	8 37	#6 x ¹³ / ₃₂ Dia. flat washer (black)	615304
1	Wire, #20 hookup, black, 6 ft.		31	#6-32 KEP nut (lockwasher attached)	015504
1	Wire, #20 hookup, blue, 6 ft.			*** *** *** **************************	
1	Wire, #20 hookup, yellow, 8 ft.		4	#8-32 x 3/8 oval head machine screw	611465
1	Wire, #16 hookup, orange, 5 ft.		4	#8 lockwasher	617405
1	Warranty Card				
1	Instruction Manual		4		611584
			4	#10-32 x 3/8 SEMS machine screw	
T-	asulator Assembly	997175		(lockwasher attached)	613564
17	isuluioi Assembly	337170		#10 x 7/8 Dia. flat washer	616005
1		801372		#10 solder lug	639309
4	Insulator, grey metal, transistor	856001	4	#10-32 KEP nut (lockwasher attached)	615504